


## WindWatch XL Quick Start Guide

**Start Here**




- Barograph
- Current pressure
- Time

Press MENU

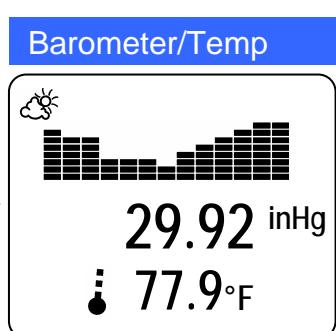

- Barograph
- Current pressure
- Current temperature

Press SUB

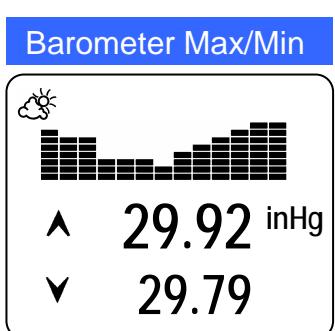

- Barograph
- Recent high pressure
- Recent low pressure

- The BAROMETER screen is the default screen, after 15 minutes of inactivity the WindWatch will revert to the BAROMETER screen
- Short press ▲ or ▼ to toggle between inHg and hPa
- Long press SUB to set time interval for barograph
- Long press MENU to set reference altitude for barometer and to clear barograph
- Long press RES to reset barograph



- Current time
- Date
- Year

Press MENU



- Current time
- UTC time

Press SUB




- Alarm time
- Alarm day (s) or date
- Alarm on/off

- In TIME/DATE:
  - Short press ▲ or ▼ to toggle between 12 and 24 hour time format and month/day or day/month date format
  - Long press SUB to set year → short press SUB to set month → short press to set day
  - Long press MENU to set hour → short press MENU to set minutes → short press to set seconds
- In TIME/UTC: Long press SUB to set UTC offset
- In ALARM:
  - Long press ▲ or ▼ activate/deactivate alarm
  - Long press MENU to set Alarm hour → short press MENU to set minutes
  - Long press SUB to set alarm day(s) → while blinking short press ▲ or ▼ to select everyday (1-7), week-end only (6-7), week-day only (1-5), a specific date (-dd-), any recurring day of the week (123-). While -dd- or 123- is blinking short press SUB to set date or recurring day of the week making adjustment with ▲ and ▼



- Elapse time
- Split time
- 2<sup>nd</sup> split time

Press MENU

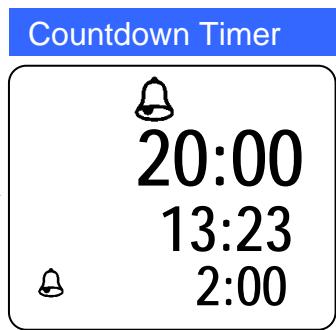

- Count down time
- Time to alarm
- Warning alarm period

Press SUB



- Count down time
- Time to alarm
- Warning alarm period

- In STOPWATCH:
  - Short press ▶ ■ to start/stop stopwatch
  - Short press ▲ for split time, short press again for 2<sup>nd</sup> split time
  - With stopwatch stopped, long press RES to reset stopwatch time only or press and hold MENU to clear stopwatch and splits
- In COUNTDOWN TIMER OR RACE TIMER:
  - Long press MENU to set countdown time → move from hours/minutes/seconds with MENU → adjust with ▲ and ▼
  - Long press SUB to set warning time → move from hours/minutes/seconds with SUB → adjust with ▲ and ▼
  - Short press ▶ ■ to start/stop timer
  - Long press RES to reset timer



- Instantaneous wind speed
- Average wind speed
- Peak wind speed

Press MENU



- Current temperature
- Average wind speed
- Wind chill

Press SUB

- In WIND SPEED:
  - Short press ▲ or ▼ to set wind speed units
  - Long Press Menu to reset average and peak displays to 0
  - Long press SUB to set the period for wind speed average → adjust with ▲ and ▼, while blinking short press SUB to move to averager icon → select normal average or peak-average with ▲ and ▼
- In WIND CHILL:
  - Short press ▲ or ▼ to set wind speed units
  - Long press MENU to set average display to 0
  - Long press SUB to set wind chill calculation → toggle between old and new formula with ▲ and ▼




- Absolute altitude (MSL)
- Relative altitude (AGL)
- Rate of ascent/descent




- Absolute altitude (MSL)
- Cumulative ascent
- Cumulative descent

Press SUB

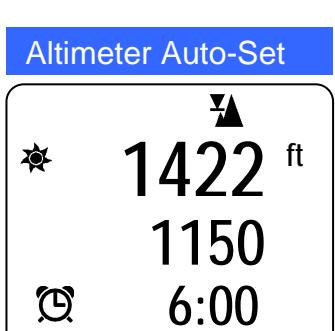


- Absolute altitude (MSL)
- Auto-set altitude
- Auto-set time

- In ALTIMETER and ALTIMETER TOTALS:
  - Short press ▲ or ▼ to set altimeter units
  - Long press RES to set Alti2 to 0 or to reset cumulative ascent and descent displays (when in ALTIMETER TOTALS screen)
  - Long Press MENU to set MSL altimeter/QNH → adjust with ▲ and ▼, while blinking, short press MENU to set reference pressure to 29.92 inHg , long press MENU to set altimeter to the auto set value, or short press SUB to set temperature compensation for altimeter.
  - Long press SUB to set relative altitude → adjust with ▲ and ▼
- In ALTIMETER AUTO-SET:
  - Long press RES to turn altimeter auto-set off/on
  - Long press SUB to set auto-set time → while blinking adjust hour with ▲ and ▼, short press SUB and set minutes with ▲ and ▼, short pres SUB to set auto-set altitude.

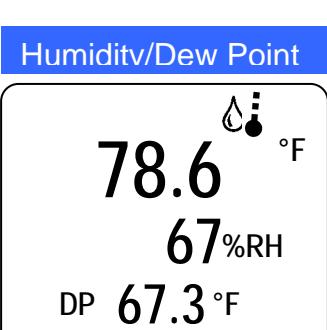


- Current temperature
- Relative humidity
- Dew point

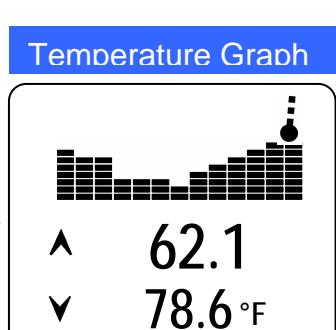


- Temperature graph
- High temp on graph
- Low temp on graph

Press SUB

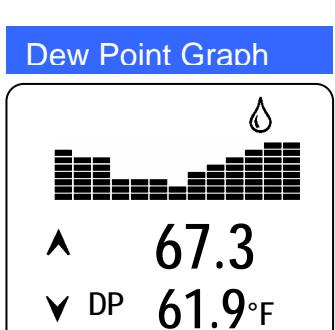

- Dew point graph
- High DP on graph
- Low DP on graph

Press ▲ ▼

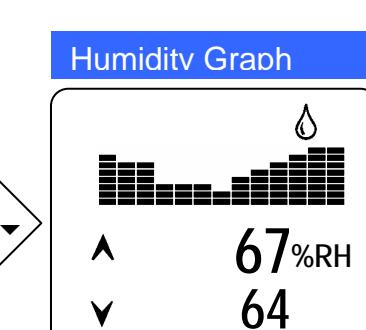

- Relative humidity graph
- High humidity on graph
- Low humidity on graph

- In HUMIDITY/DEW POINT:
  - Short press ▲ or ▼ sets temp units
- In TEMPERATURE GRAPH:
  - Short press ▲ or ▼ sets temp units
  - Long press RES to reset graph
  - Long press SUB to set time interval of graph, while blinking → adjust with ▲ and ▼
- In DEW POINT/HUMIDITY GRAPH:
  - Long press RES to reset graph
  - Long press SUB to set time interval of graph, while blinking → adjust with ▲ and ▼

Press MENU to Barograph screen